

14-Dec-2013



# TOAD4

Four Axis Stepper Motor Controller


Page: CPU


Copyright (c) 2013 Kustaa Nyholm

SpareTimeLabs

Kustaa Nyholm  
Laklammenpolku 40  
02570 Siuntio  
Finland

RC8.2

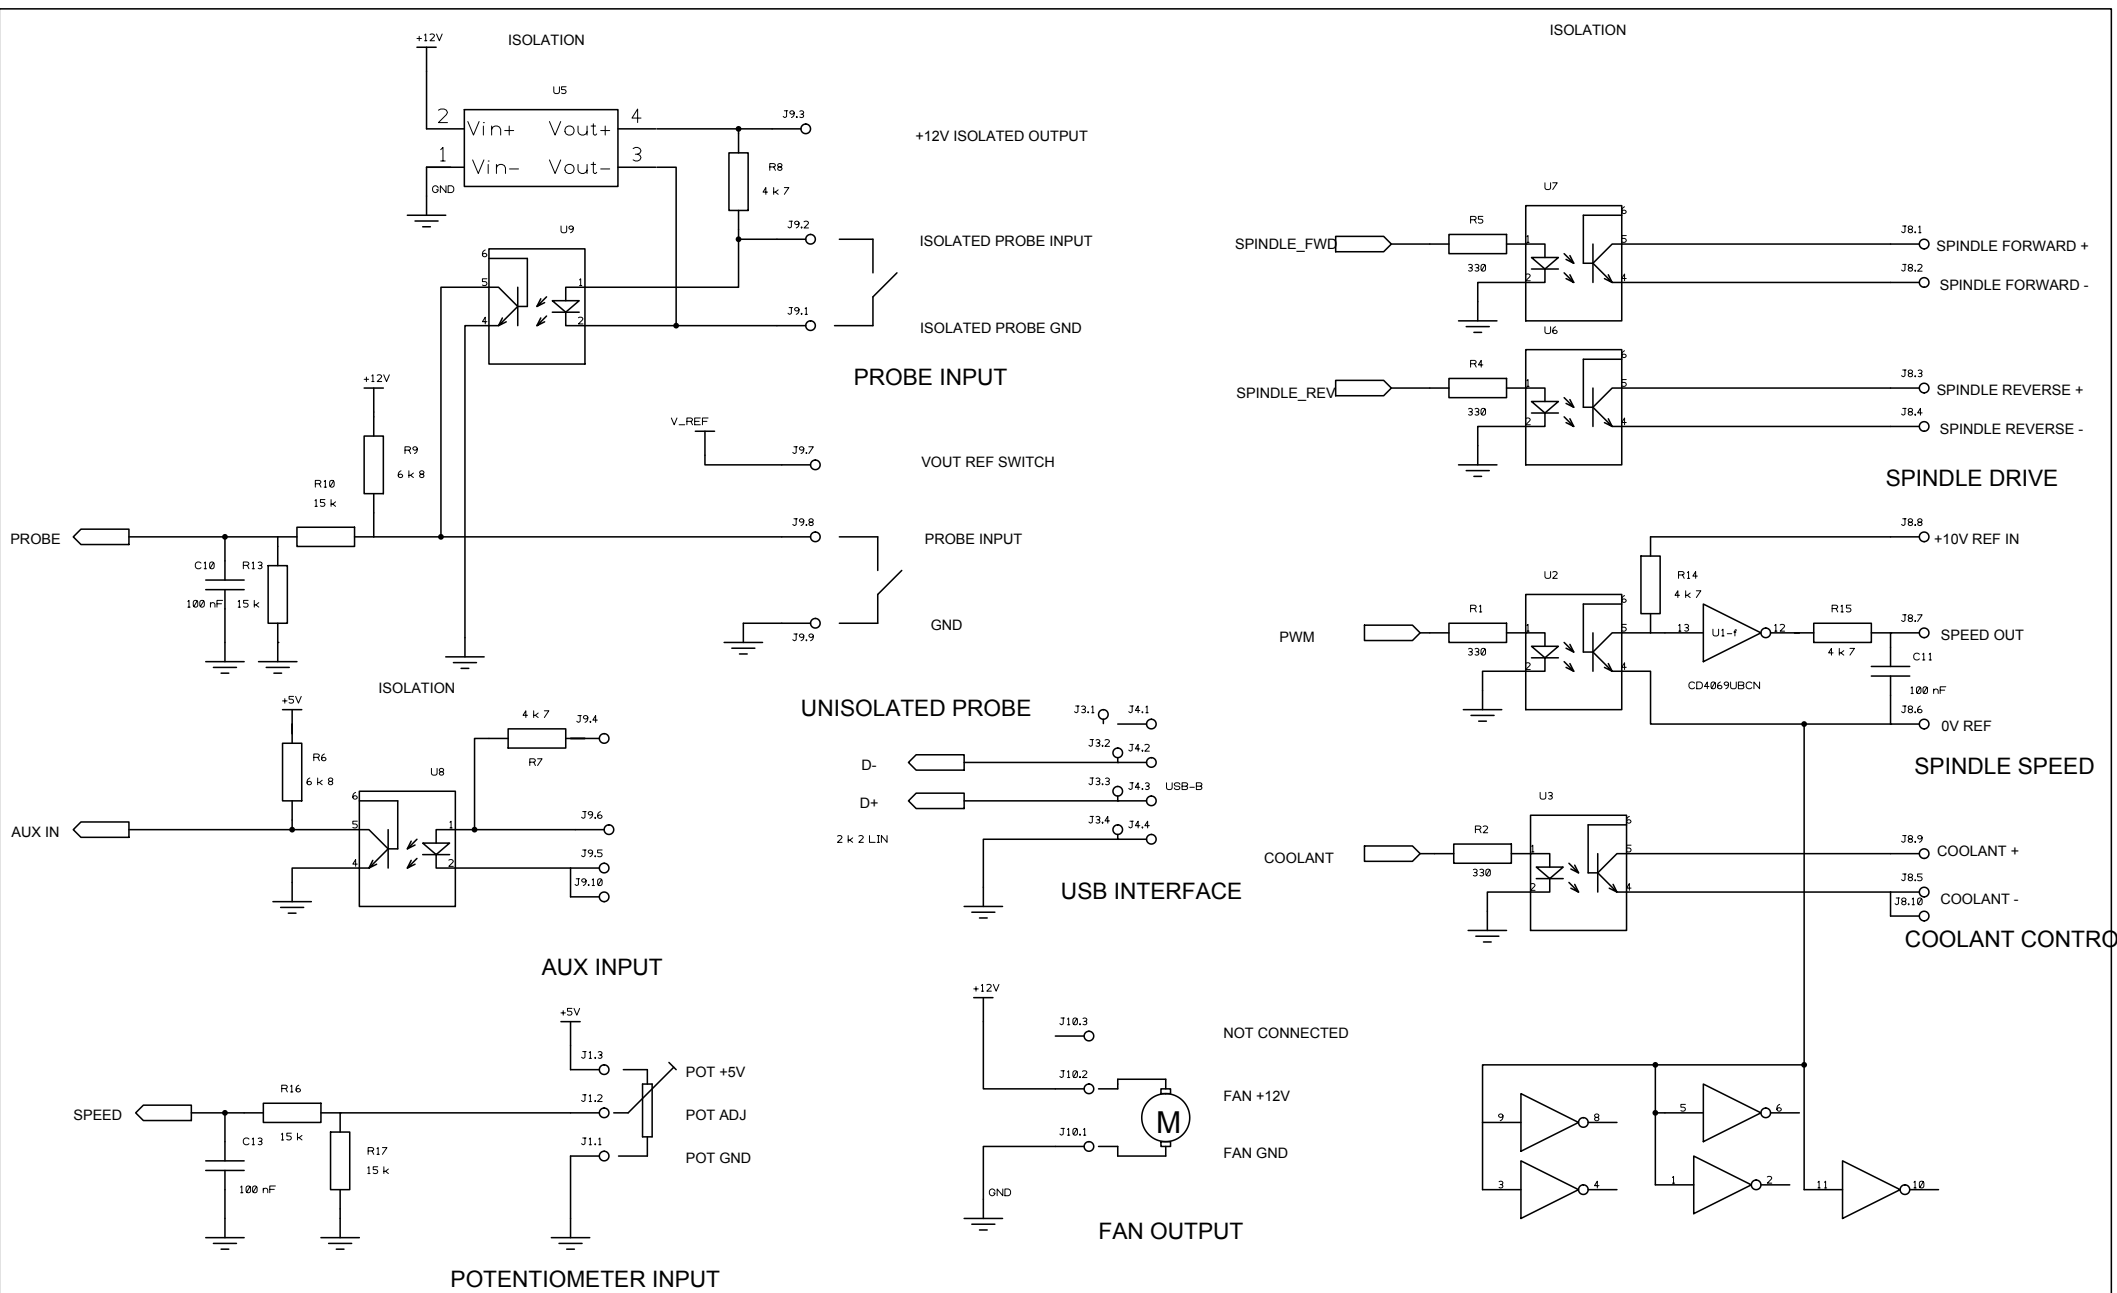

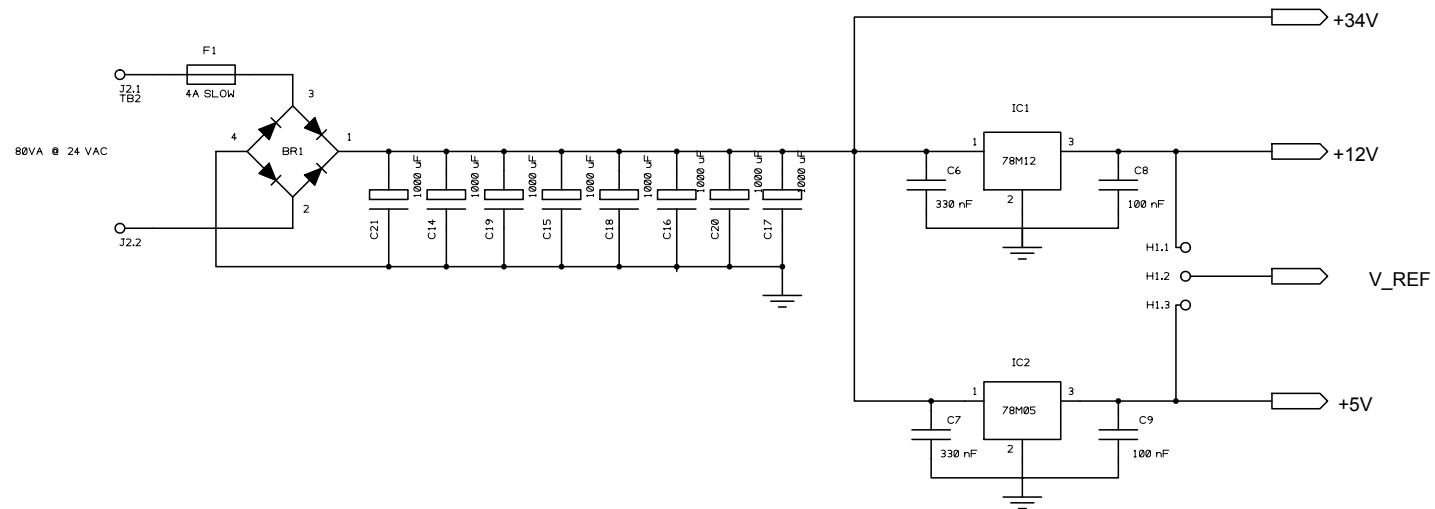

14-Dec-2013



Page: PSU

Copyright (c) 2013 Kustaa Nyholm


# TOAD4

Four Axis Stepper Motor Controller

SpareTimeLabs

Kustaa Nyholm  
Laklammenpolku 40  
02570 Siuntio  
Finland

RC8.2

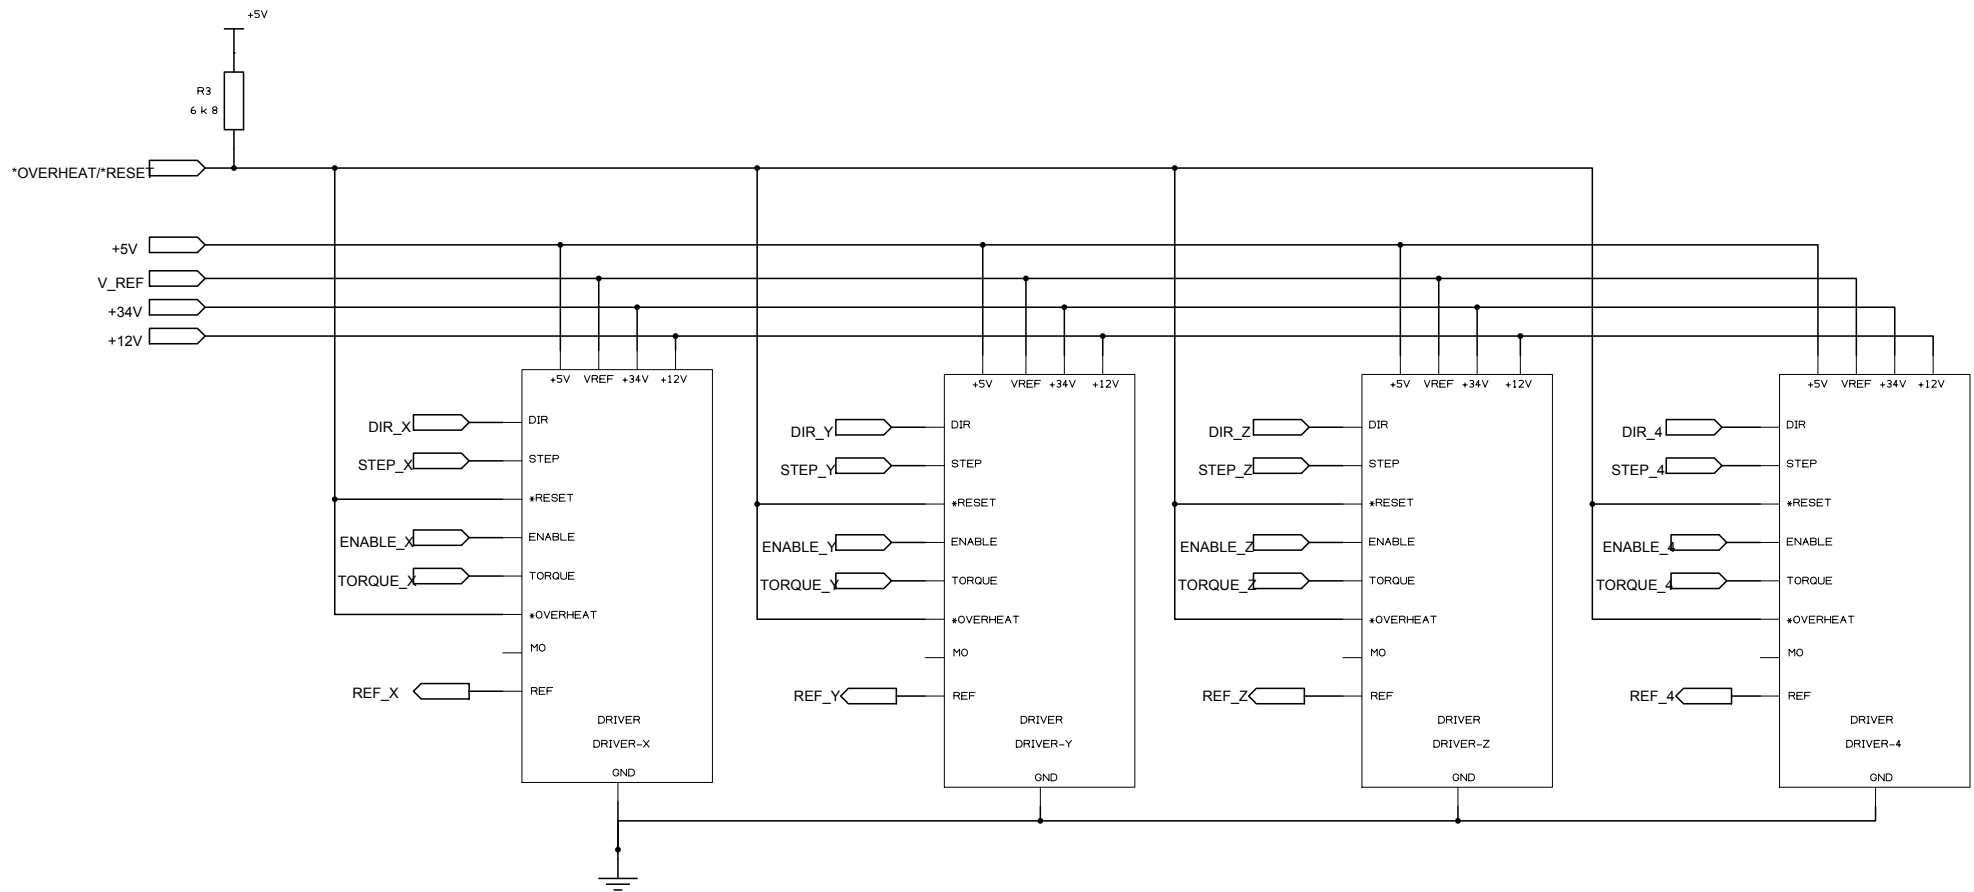

14-Dec-2013



# TOAD4

Four Axis Stepper Motor Controller

Page: DRIVERS


Refer to this page for signal connections to individual DRIVER block instances

Copyright (c) 2013 Kustaa Nyholm


SpareTimeLabs

Kustaa Nyholm  
Laklammenpolku 40  
02570 Siuntio  
Finland

RC8.2

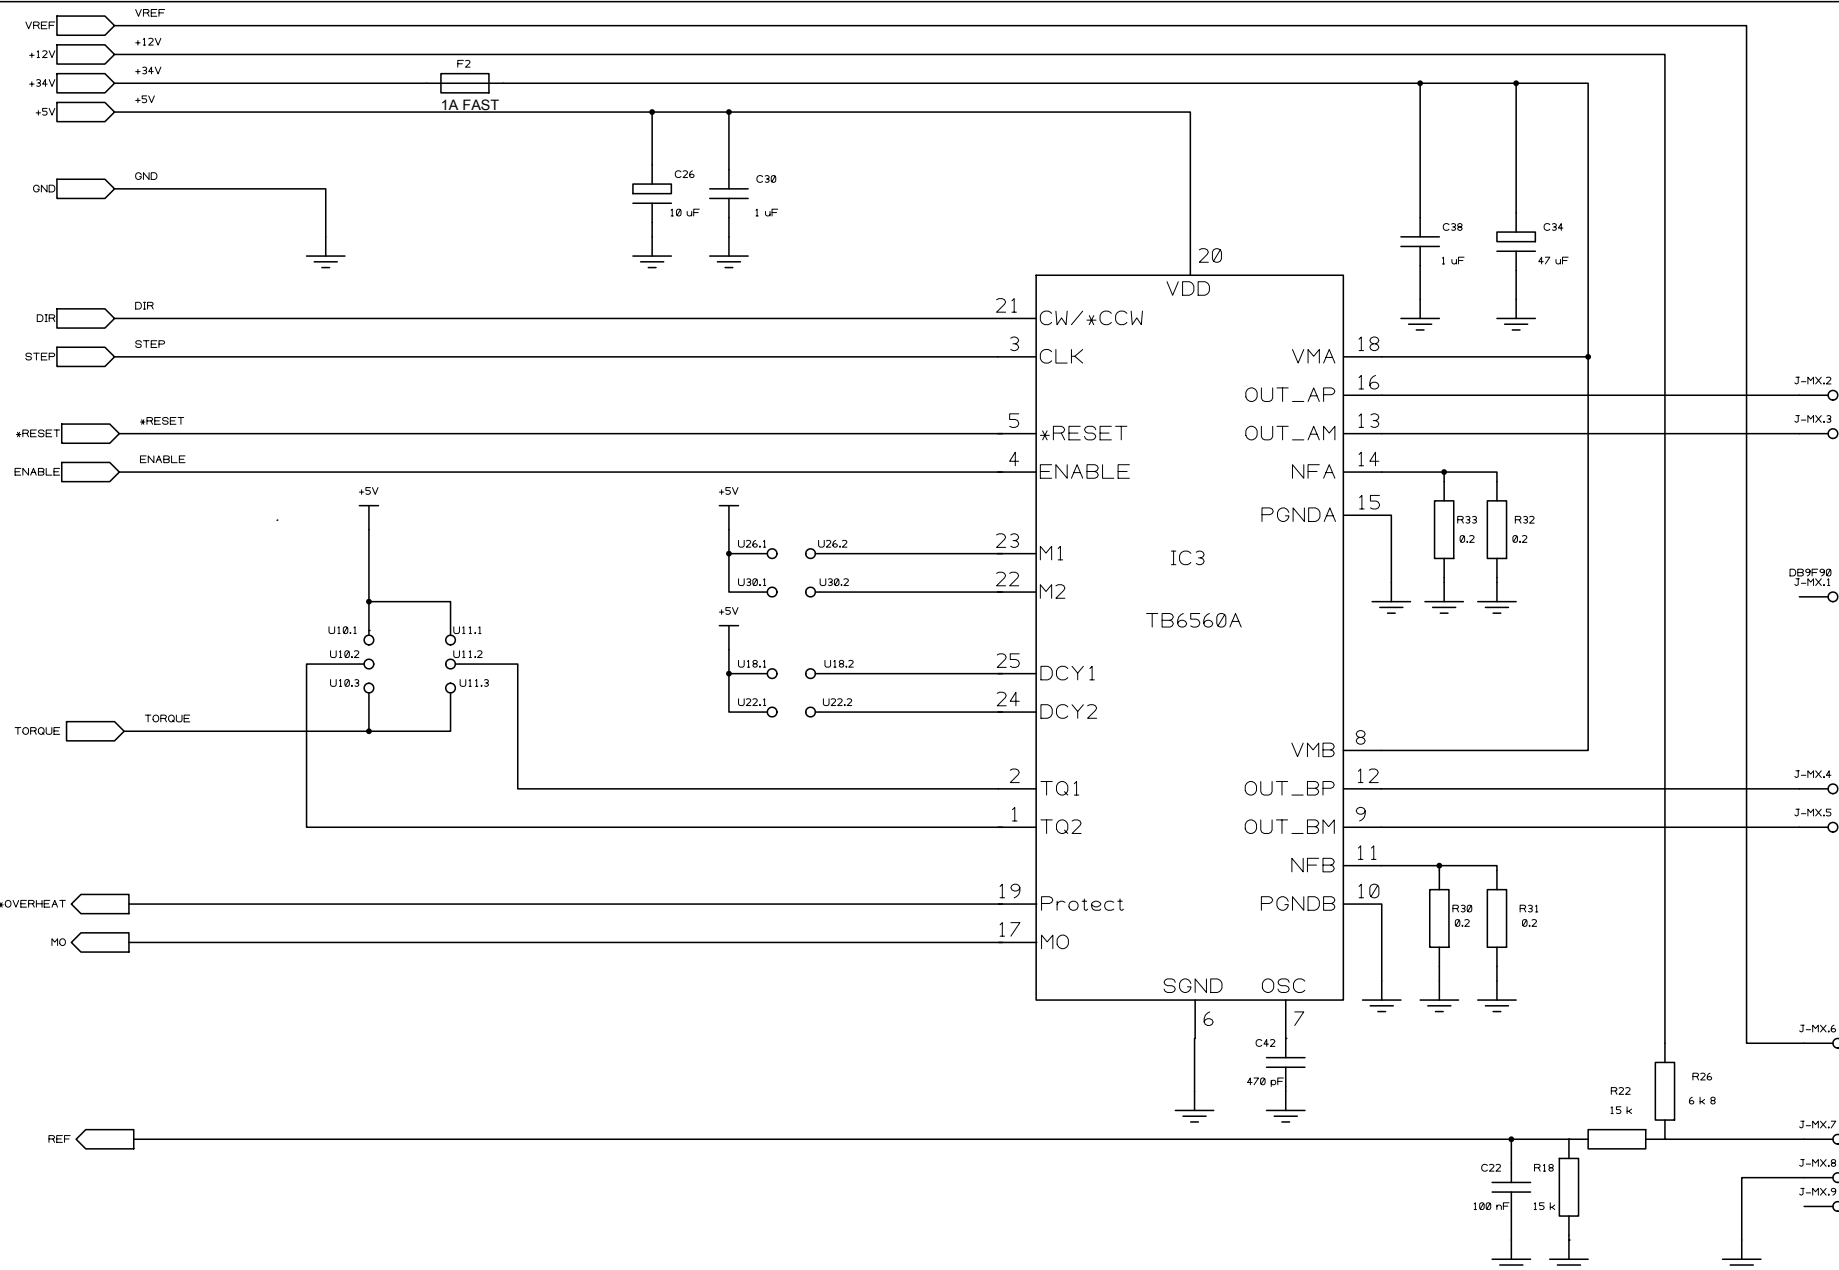

14-Dec-2013

 

# TOAD4

Four Axis Stepper Motor Controller

Page: DRIVER block instance


See page DRIVERS for signal connections to each driver block instance

Copyright (c) 2013 Kustaa Nyholm


SpareTimeLabs

Kustaa Nyholm  
Laklamenpolku 40  
02570 Siuntio  
Finland

RC8.2

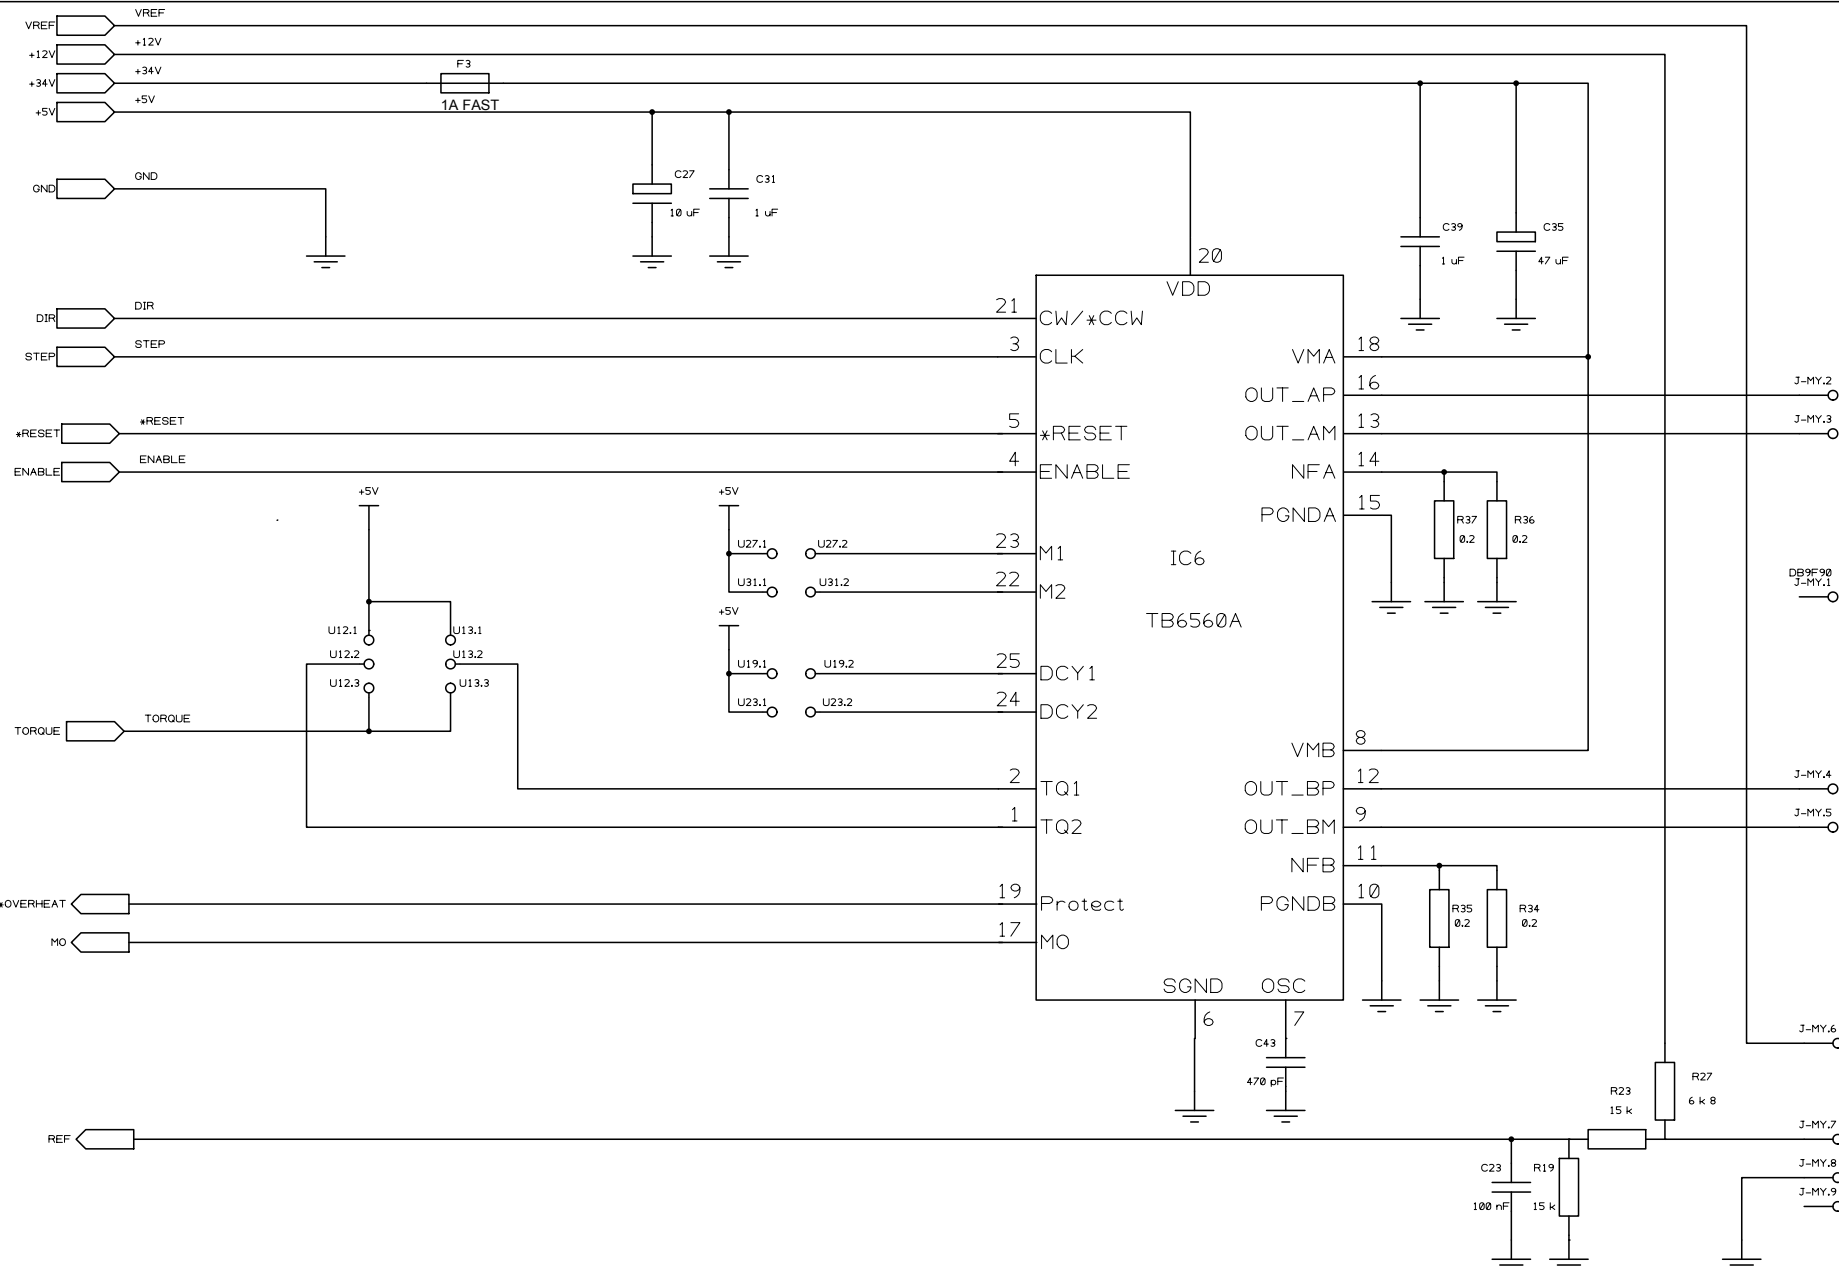

14-Dec-2013

 

# TOAD4

Four Axis Stepper Motor Controller

Page: DRIVER block instance


See page DRIVERS for signal connections to each driver block instance

Copyright (c) 2013 Kustaa Nyholm


SpareTimeLabs

Kustaa Nyholm  
Laklamenpolku 40  
02570 Siuntio  
Finland

RC8.2

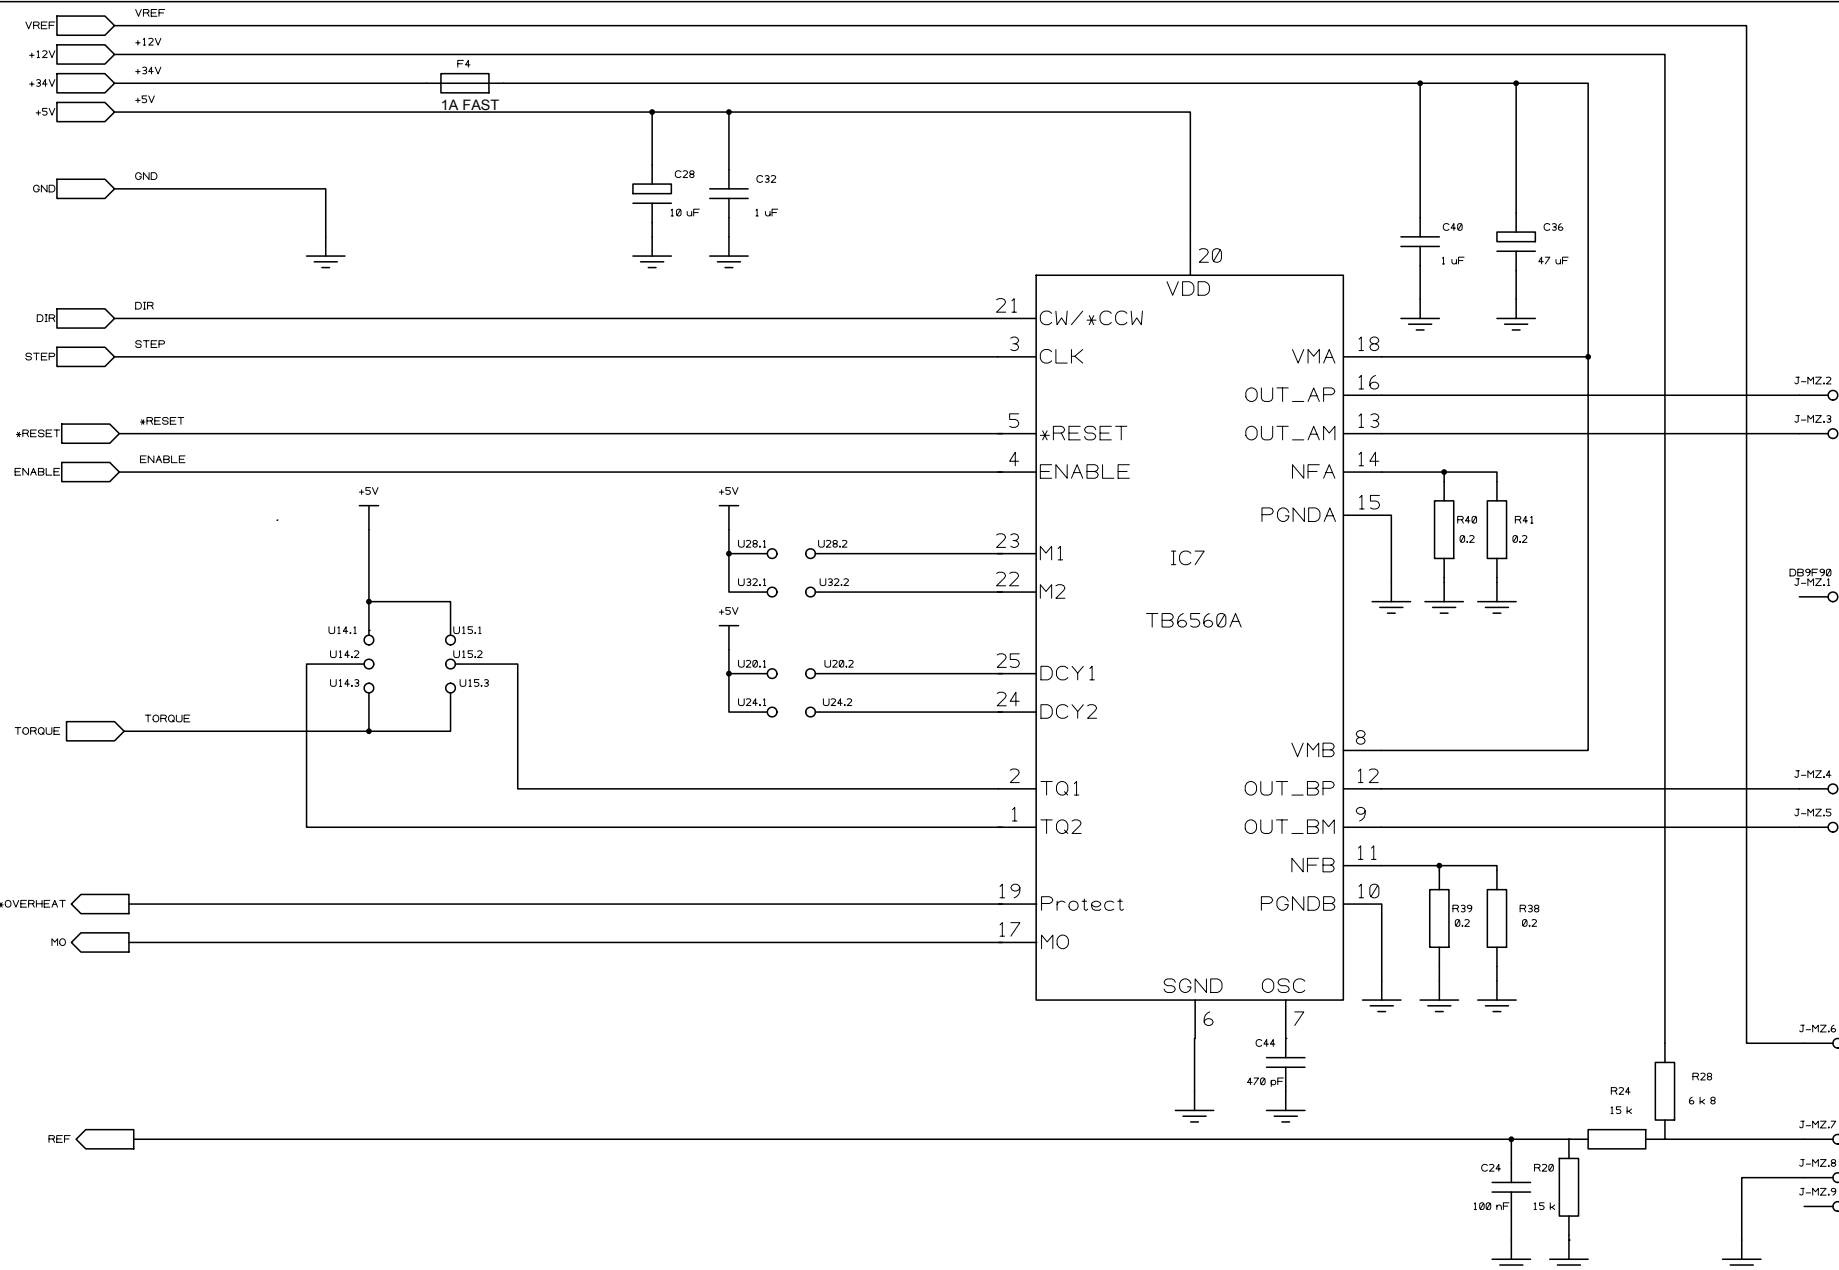

14-Dec-2013

 

# TOAD4

Four Axis Stepper Motor Controller

Page: DRIVER block instance


See page DRIVERS for signal connections to each driver block instance

Copyright (c) 2013 Kustaa Nyholm


SpareTimeLabs

Kustaa Nyholm  
Laklammenpolku 40  
02570 Siuntio  
Finland

RC8.2

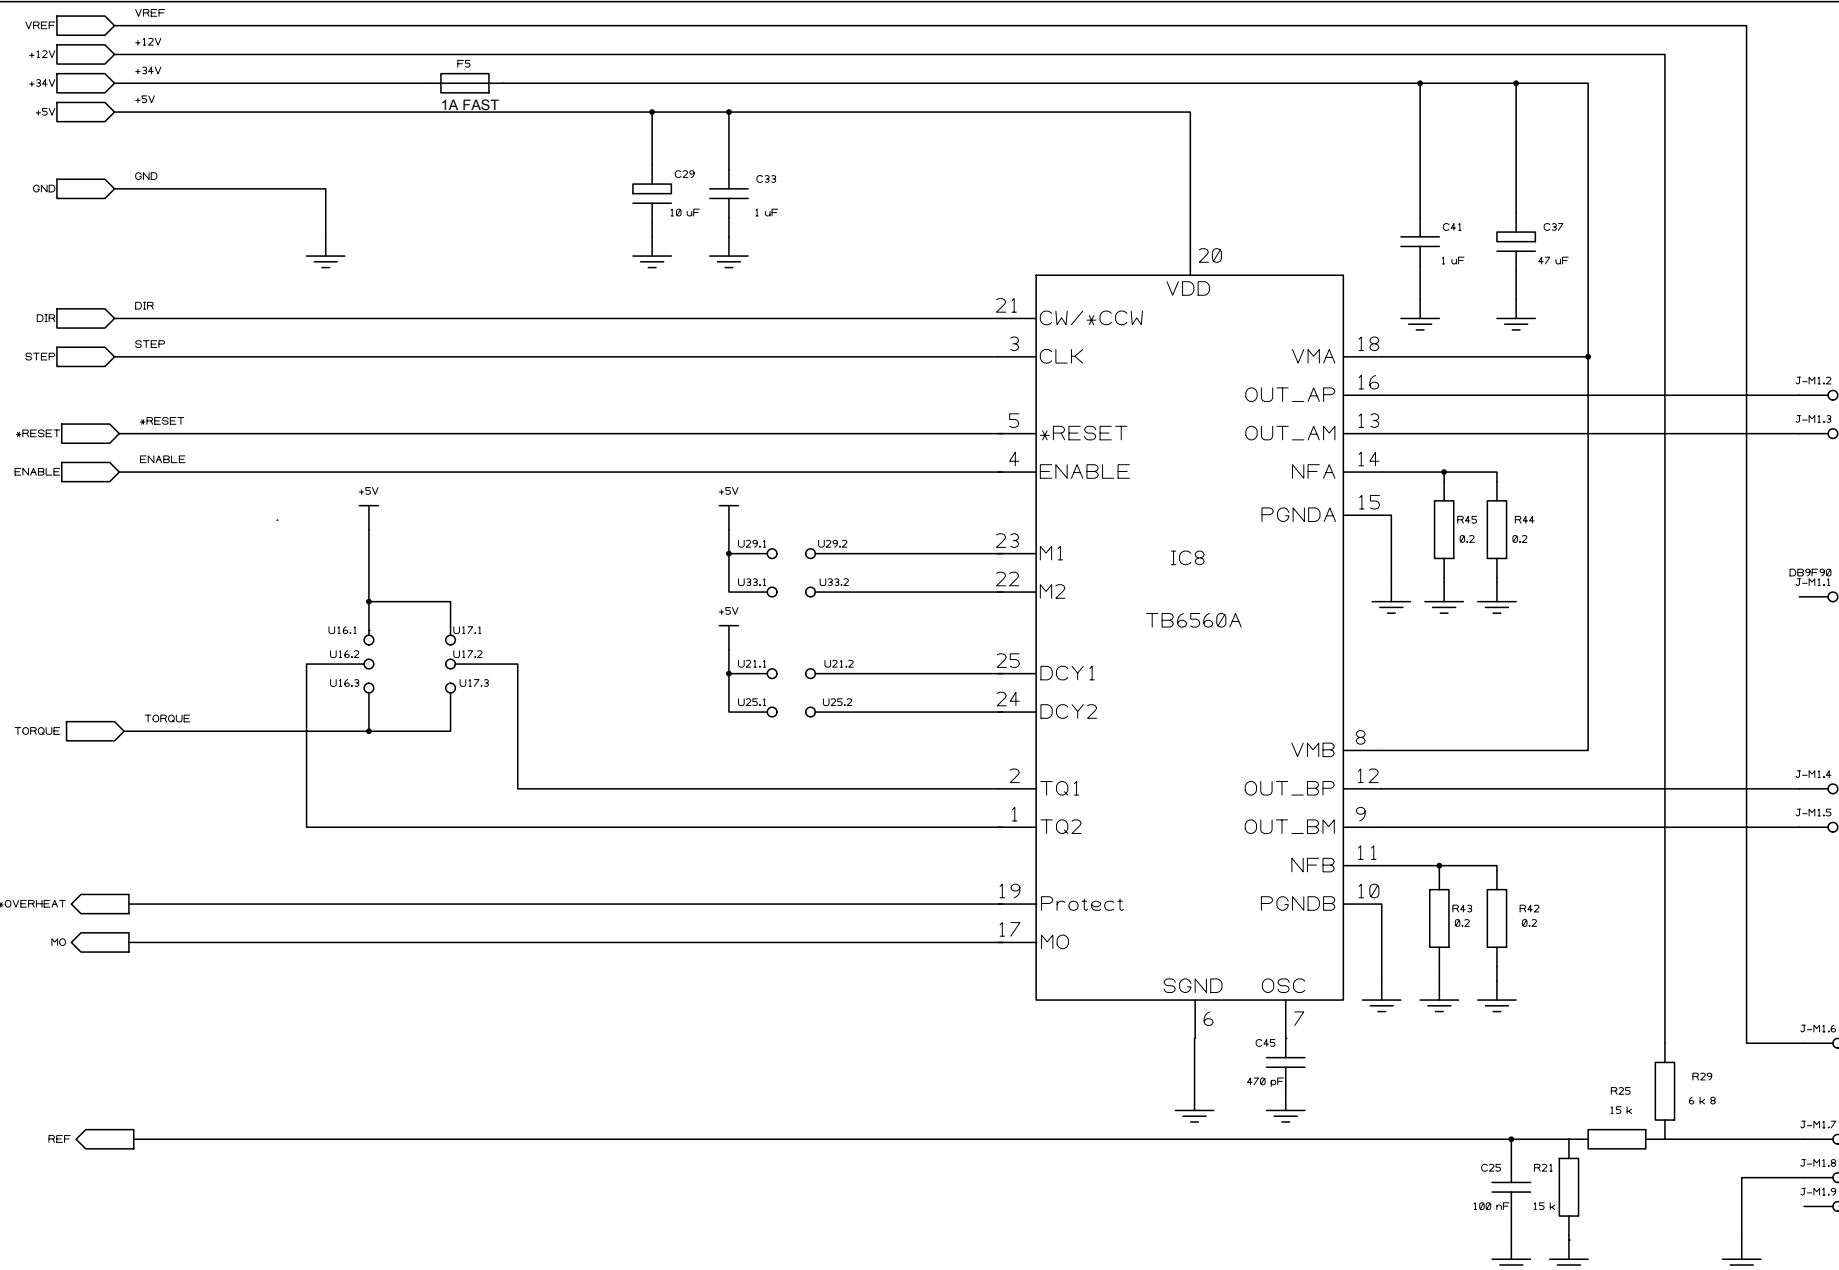

14-Dec-2013

 

# TOAD4

Four Axis Stepper Motor Controller

Page: DRIVER block instance

See page DRIVERS for signal connections to each driver block instance

Copyright (c) 2013 Kustaa Nyholm

SpareTimeLabs

Kustaa Nyholm  
Laklamenpolku 40  
02570 Siuntio  
Finland

RC8.2